


What to do if ...

List of Warning/Indicator Lights




The units used on the speedometer and tachometer gauge display, as well as the indicators and warning lights, may differ depending on the model / type.

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.




(U.S.A.)



(Canada)


Brake system warning light

Stop the vehicle immediately.




Charging system warning light

Have the vehicle inspected immediately.




(U.S.A.)




(Canada)


Malfunction indicator lamp



 
Electric power steering warning light




Pre-collision system warning light<sup>\*1</sup>



SRS warning light




(U.S.A.)



(Canada)

ABS warning light



Tire pressure warning light

(Flashing and then continuously on)

For further information, refer to the Owner's Manual.

### Follow the correction procedures.



Open door warning light



Low fuel level warning light



(On the instrument cluster)

Driver's seat belt reminder light



(On the center panel)

Front passenger's seat belt reminder light



(Illuminate no flashing)

Tire pressure warning light <sup>\*2</sup>



Master warning light

### See the Owner's Manual



Turn signal indicator



Headlight high beam indicator



Headlight indicator (U.S.A.)



Tail light indicator (Canada)



"SPORT" indicator



"SNOW" indicator



Cruise control indicator



"AFS OFF" indicator



Front fog light indicator



Intuitive parking assist indicator <sup>\*1</sup>



Slip indicator



SRS airbag cut-off indicator



VSC off indicator



"TRAC OFF" indicator



Shift range display



Gear position display

For further information, refer to the Owner's Manual.

<sup>\*1</sup>: If equipped

<sup>\*2</sup>: Turns on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature excluding the spare tire. Adjust the tire inflation pressure.

## What to do if ...

### If the electronic key does not operate properly

#### **n** Unlocking and locking the doors



To unlock or lock the vehicle, use the mechanical key to remove the lock cover on the driver's door handle. The mechanical key is stored inside the electronic key.

- 1** Unlocks
- 2** Locks

#### **n** Starting the engine



- 1** Depress the brake pedal.
- 2** Touch the Lexus emblem side of the electronic key to the "ENGINE START STOP" switch.
- 3** Press the "ENGINE START STOP" switch within 10 seconds of the buzzer, keeping the brake pedal depressed.



To change "ENGINE START STOP" switch modes, release the brake pedal and press the "ENGINE START STOP" switch within 10 seconds of the buzzer.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

## If the engine doesn't start

Make sure that the correct operating procedures have been followed.



### Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine.  
(→P.14)



### Steering wheel lock

Make sure that the steering wheel lock is released.

To release it, press the “ENGINE START STOP” switch while gently turning the wheel left and right. (→P.8)

If the engine still does not start, see the Owner's Manual for more information or contact your Lexus dealer.

## What to do if ...

### Electronic Key Alarm

The electronic key alarm uses an alarm and warning messages to indicate that the electronic key has been used improperly. Take appropriate measures in response to any warning messages that are displayed. In some cases, an alarm may sound without an accompanying warning message. If so, follow the correction procedure in the table below.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 2 seconds	Tried to lock the doors using the entry function while the electronic key is still inside the passenger compartment.	Retrieve the electronic key from the passenger compartment and lock the doors again.
	Closed the trunk while the electronic key is still inside and all doors are locked.	Retrieve the electronic key from the trunk and close the trunk lid.
Exterior alarm sounds once for 60 seconds	Tried to exit the vehicle with the electronic key and lock the doors without first turning the "ENGINE START STOP" switch OFF.	Turn the "ENGINE START STOP" switch OFF and lock the doors again.
Exterior alarm sounds once for 10 seconds	Tried to lock the vehicle using the entry function while a door is open.	Close all of the doors and lock the doors again.
Interior alarm sounds continuously	Tried to open the door and exit the vehicle without shifting the shift lever to P.	Shift the shift lever to P.
Interior alarm pings continuously	Switched to ACCESSORY mode while the driver's door is open. (Opened the driver's door when the "ENGINE START STOP" switch is in ACCESSORY mode.)	Close the driver's door.
	Turned the "ENGINE START STOP" switch OFF while the driver's door is still open.	Close the driver's door.